


LIBOX 50/51 connection scheme

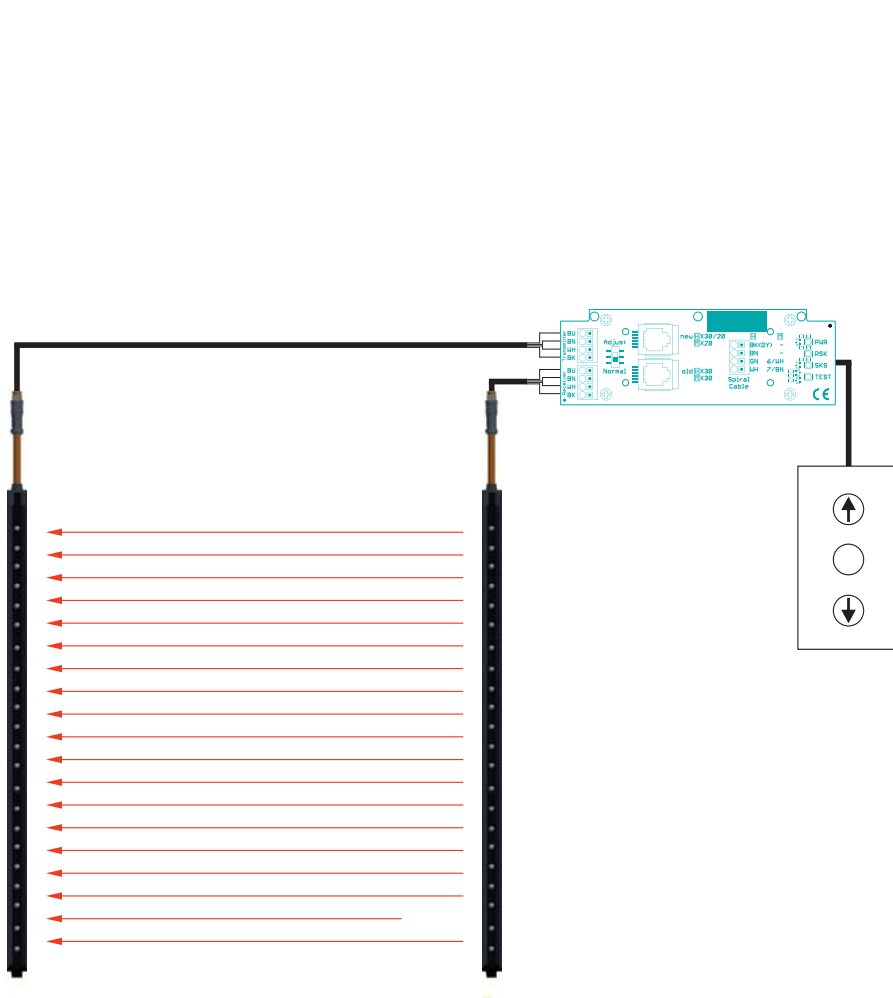


Hörmann control panels

LIBOX 50/51

- junction box for Hörmann control panels for the connection of a light curtain with NPN output
- possible connection of closed circuit using the spiral cable supports slack rope switch, night-lock and pass door switch (also tested)
- 4 LED's for power on, closed circuit (RSK), light curtain output (SKS) and test
- switch for easy activation of alignment mode
- PCB fits in Hörmann boxes or our LAD4
- accessories: LAD4 box including cable glands (anti-kink, M20 + seals for modular and circular shaped cable)

solution 1:
light curtain in addition
to existing safety edge
Hörmann control panel
with system plug
as in B460FU

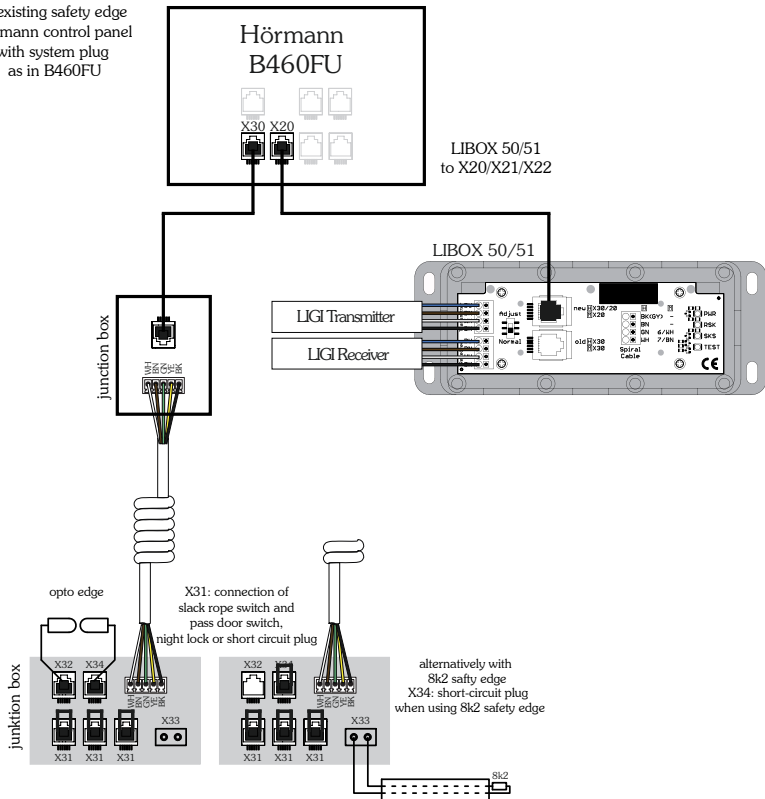


Hörmann control panels

solution 2:
light curtain instead
of safety edge

Hints: potential problems if
automatic closing is activated


Hörmann control panel
with system plug
as in B460FU

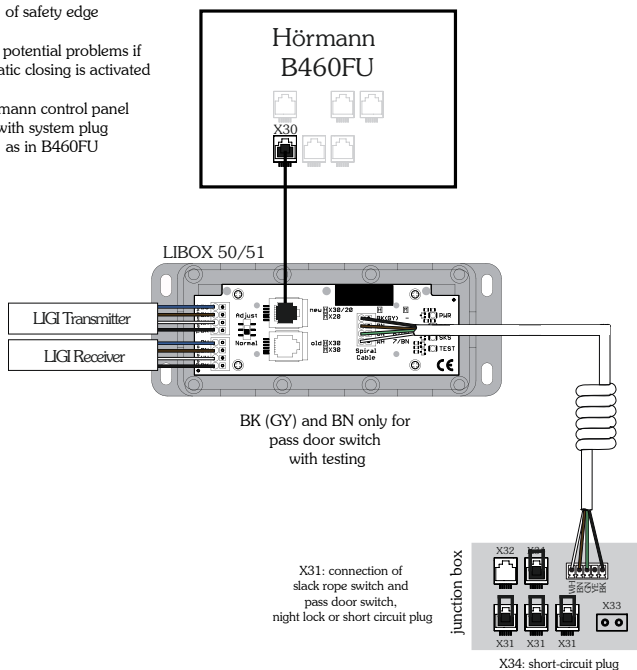

solution 3:
Light curtains at Hörmann control
without junction box

Hints: potential problems if
automatic closing is activated

Hörmann control panel
with system plug
as in B460FU

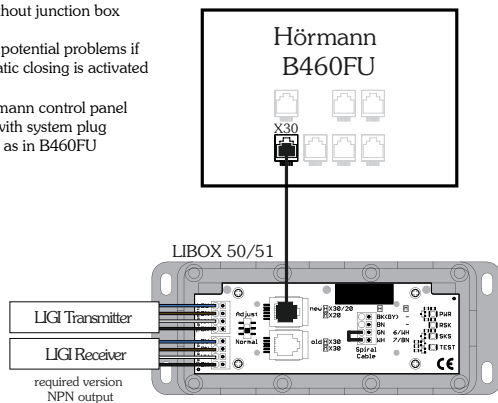


Marantec control panels

LIBOX 50/51

- junction box for Marantec control panels for the connection of a light curtain with NPN output
- possible connection of closed circuit using the spiral cable supports slack rope switch, night-lock and pass door switch (also tested)
- 4 LED's for power on, closed circuit (RSK), light curtain output (SKS) and test
- switch for easy activation of alignment mode
- PCB fits in Marantec boxes or our LAD4
- accessories: LAD4 box including cable glands (anti-kink, M20 + seals for modular and circular shaped cable)

solution 1:
light curtain in addition
to existing safety edge
Marantec control panel
with system plug

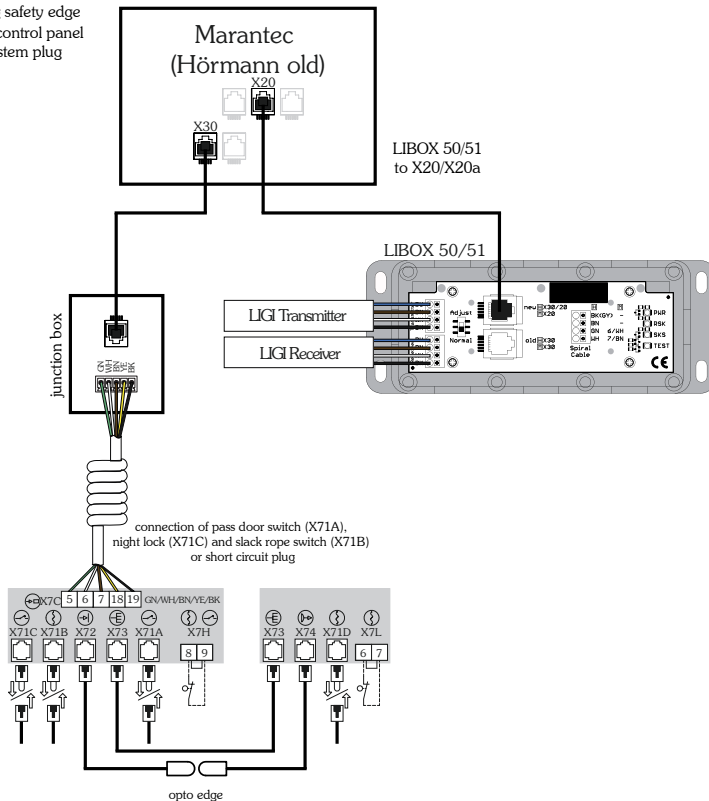


Marantec control panels

solution 2:
light curtain instead
of safety edge

Hints: potential problems if
automatic closing is activated


Marantec control panel
with system plug

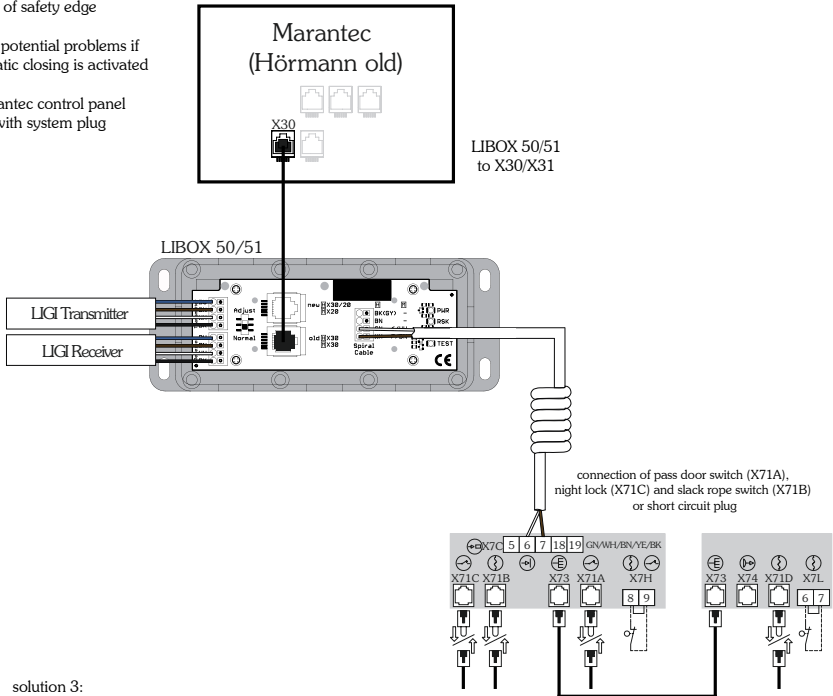

solution 3:
Light curtains at Hörmann control
without junction box

Hints: potential problems if
automatic closing is activated

Marantec control panel
with system plug

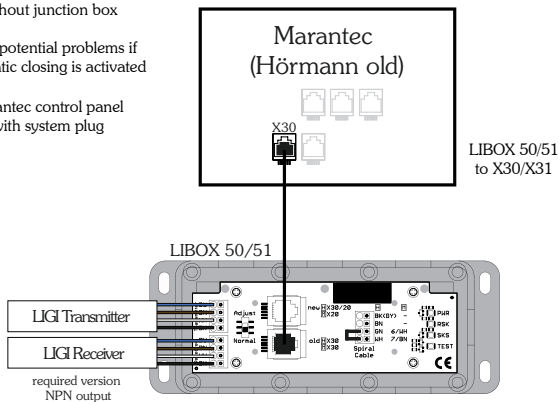



Witt Sensoric GmbH
Gradestraße 48-50 · 12347 Berlin · Germany
Tel.: +49 (0) 30 / 75 44 94 - 120
Fax: +49 (0) 30 / 75 44 94 - 123
vertrieb@witt-sensoric.de
www.witt-sensoric.de

Technische Daten können ohne weitere Ankündigung geändert werden und dem aktuellen Stand der Technik angepasst werden. Witt Sensoric GmbH Anschluss V1.0